



FIGURE 1

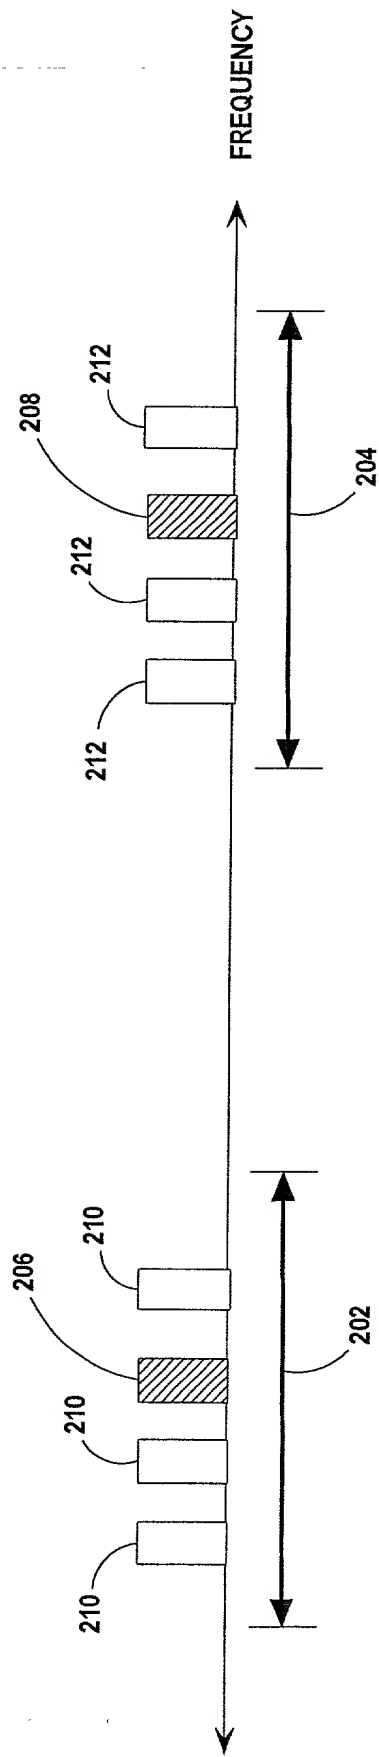

200

FIGURE 2

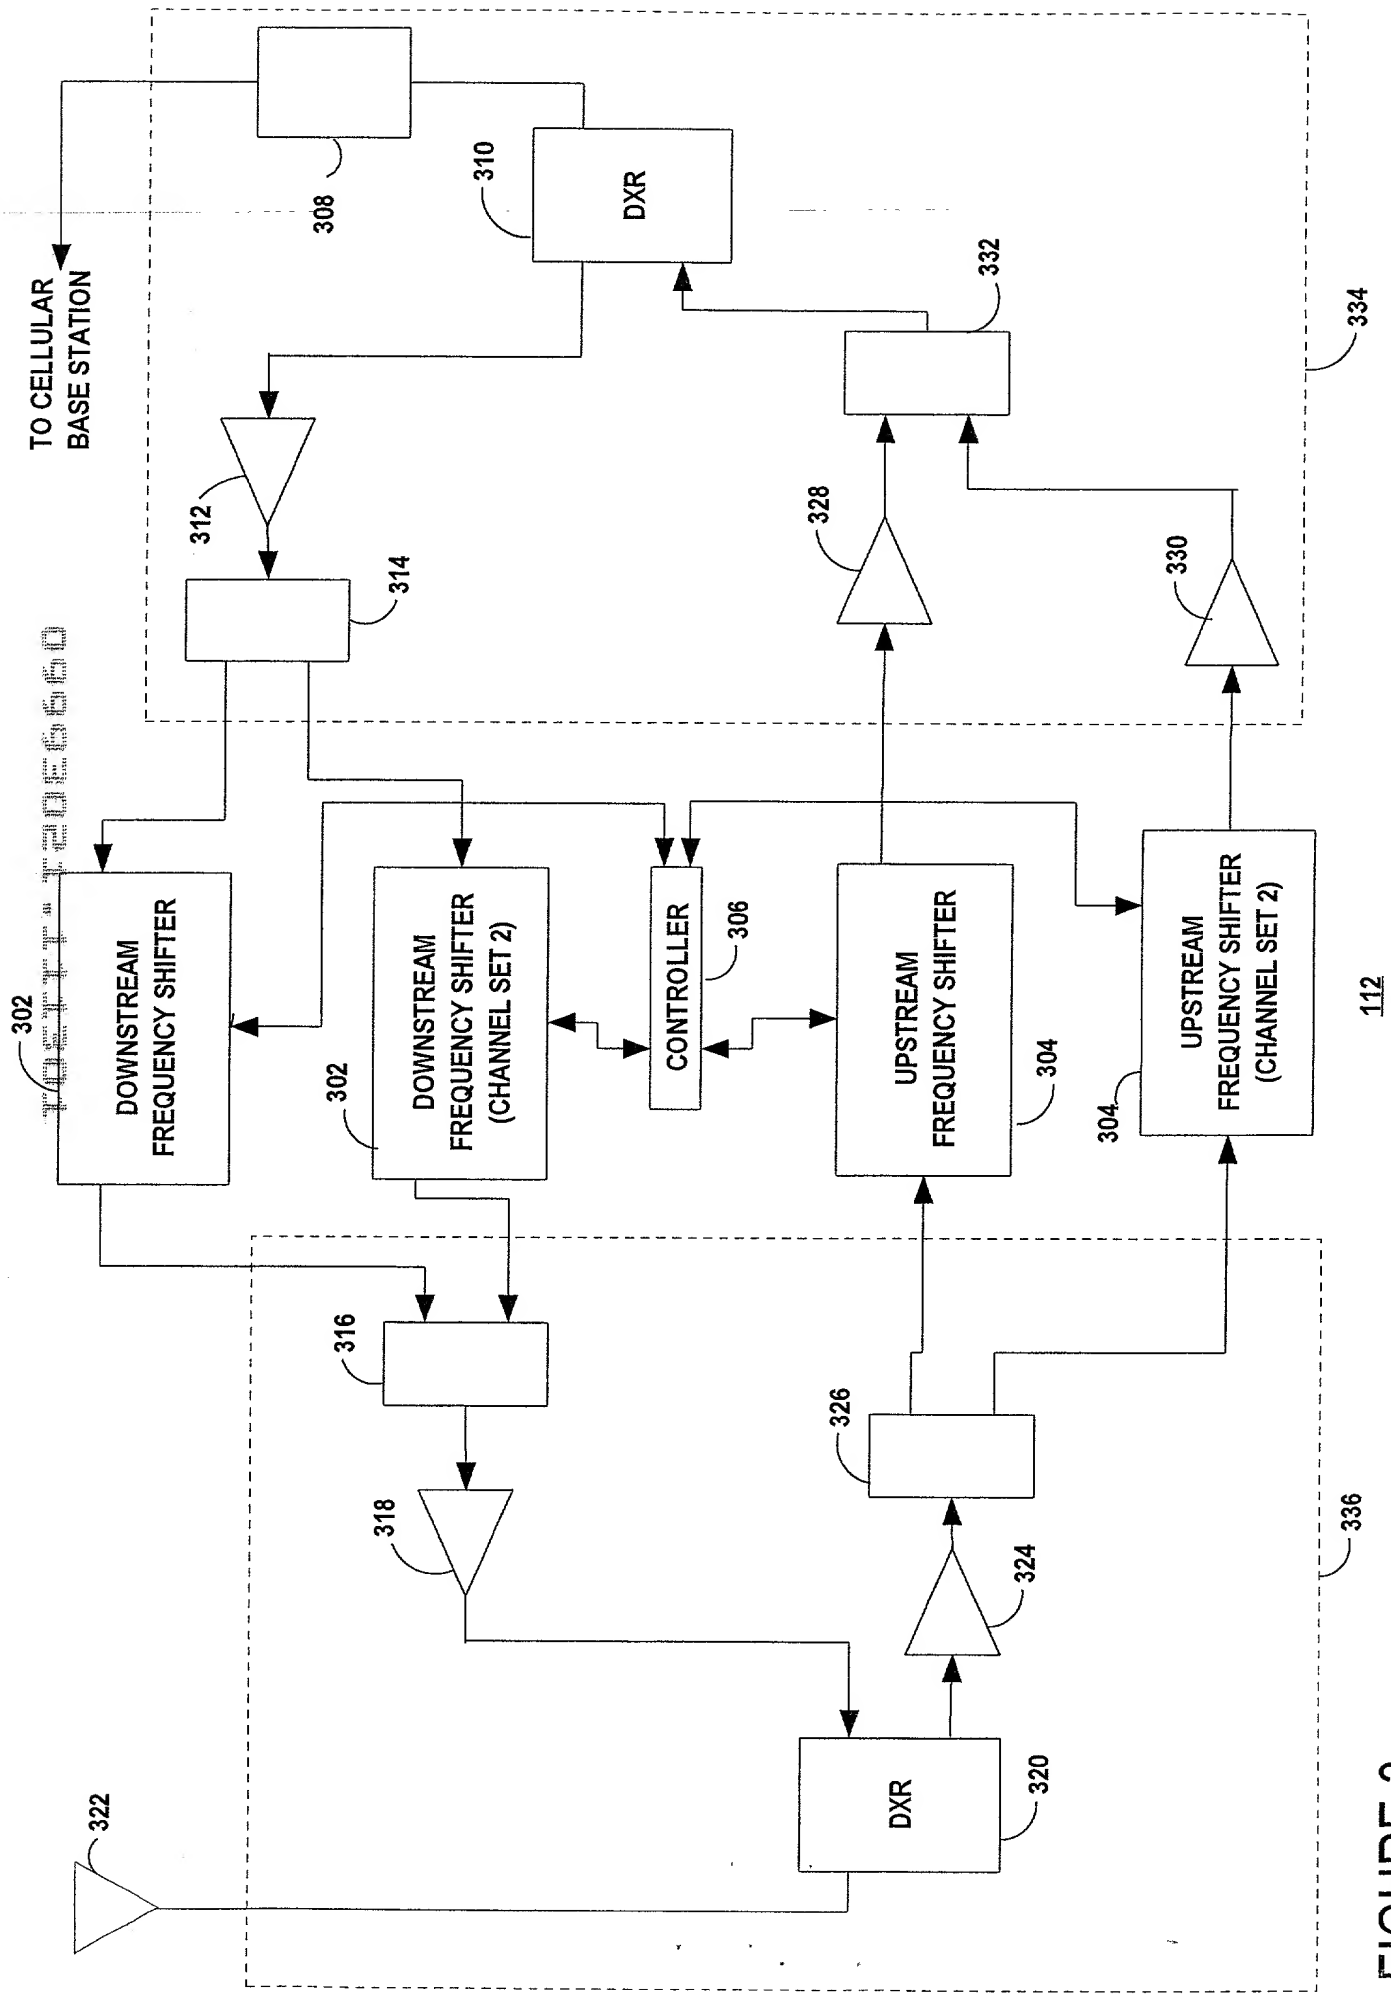

# FIGURE 3

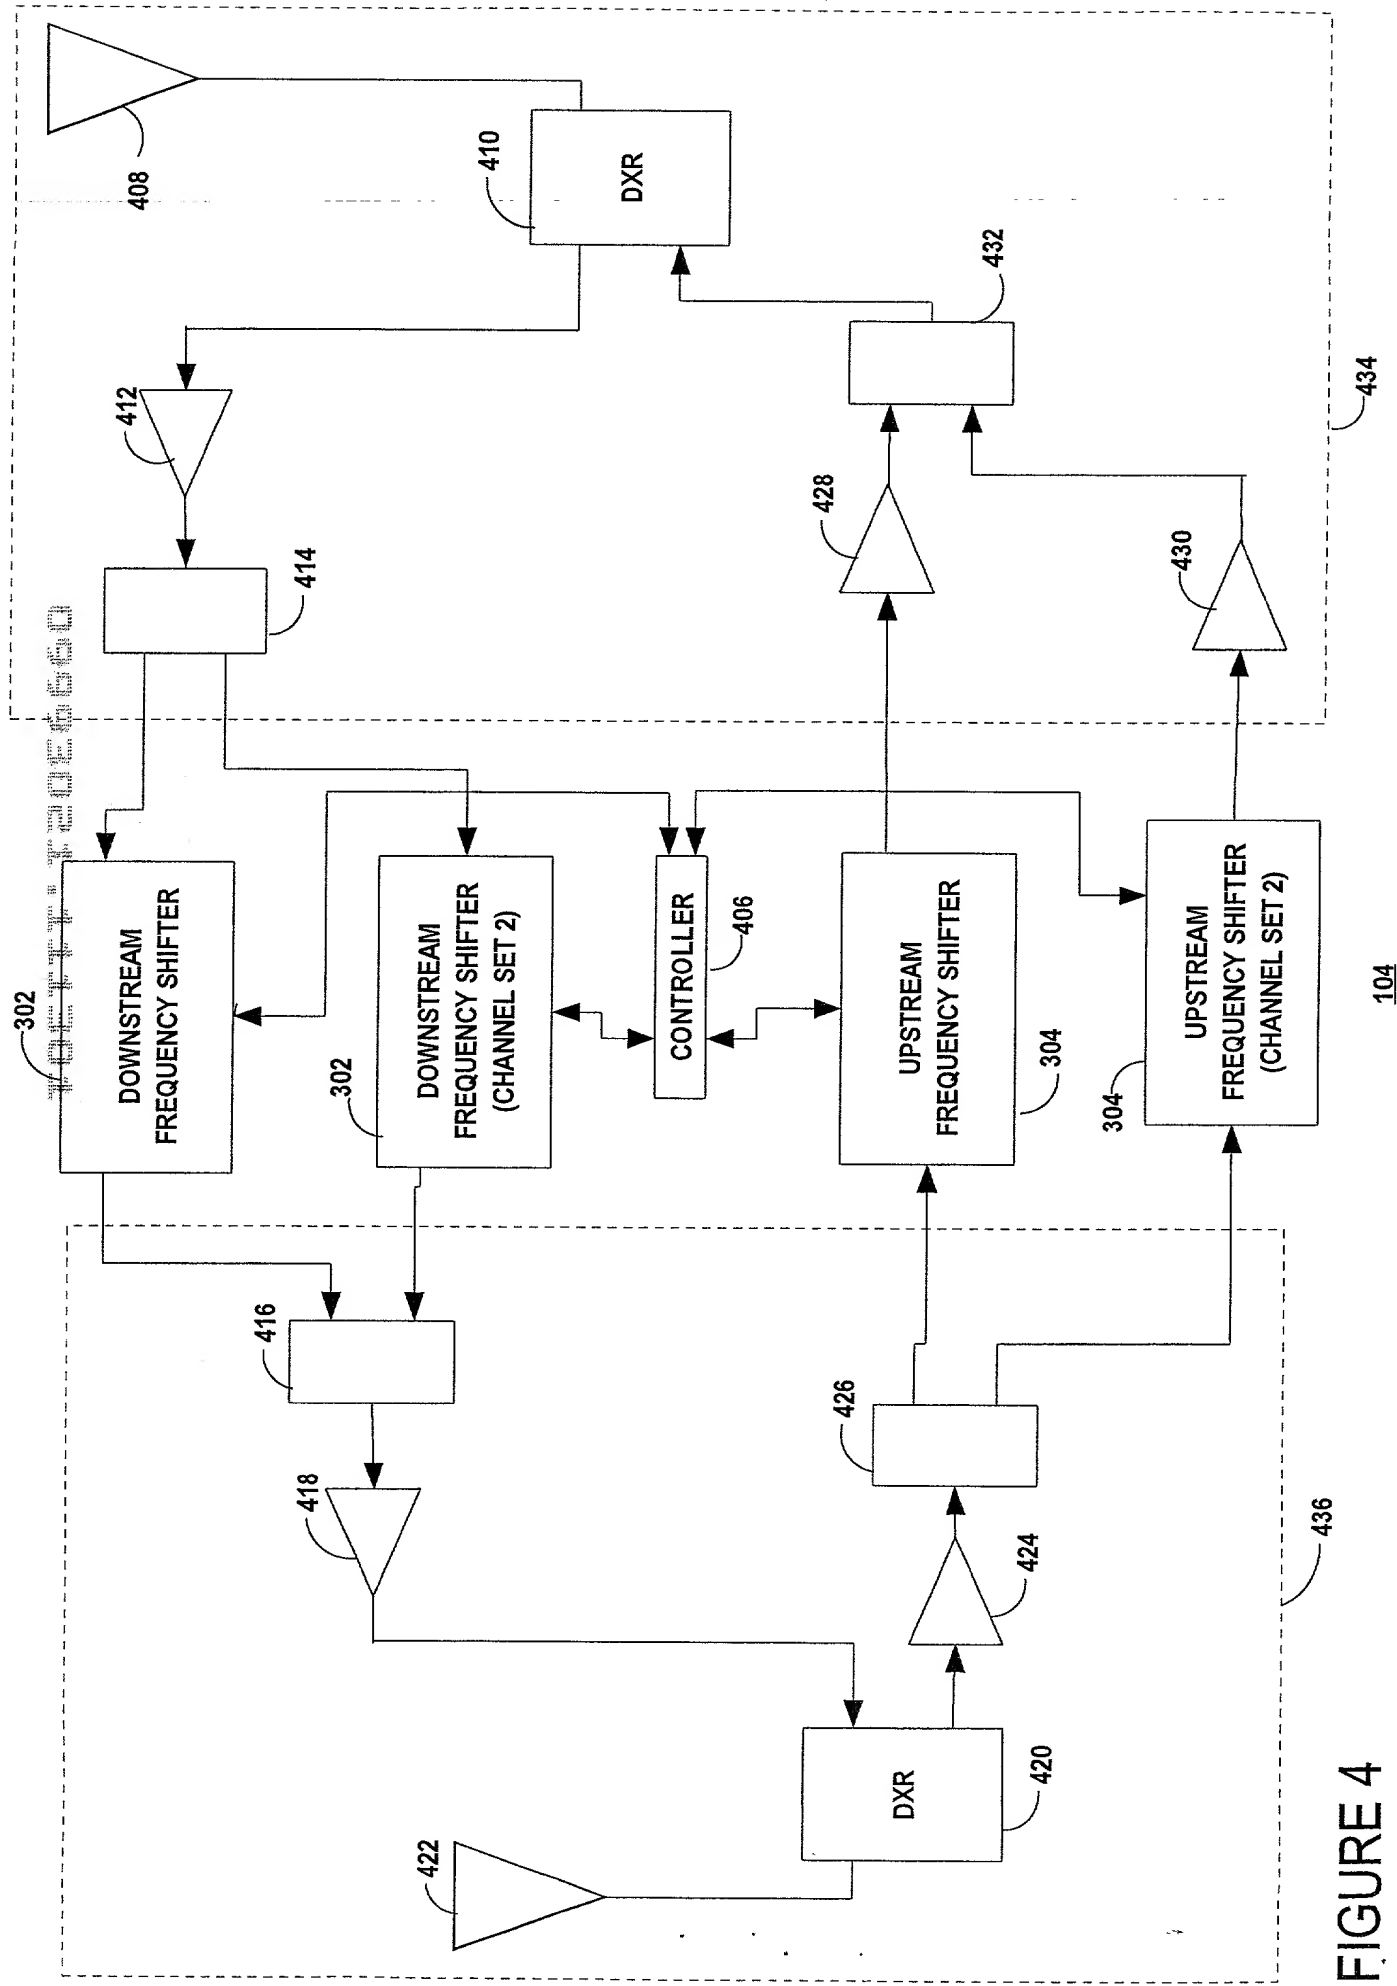


FIGURE 4



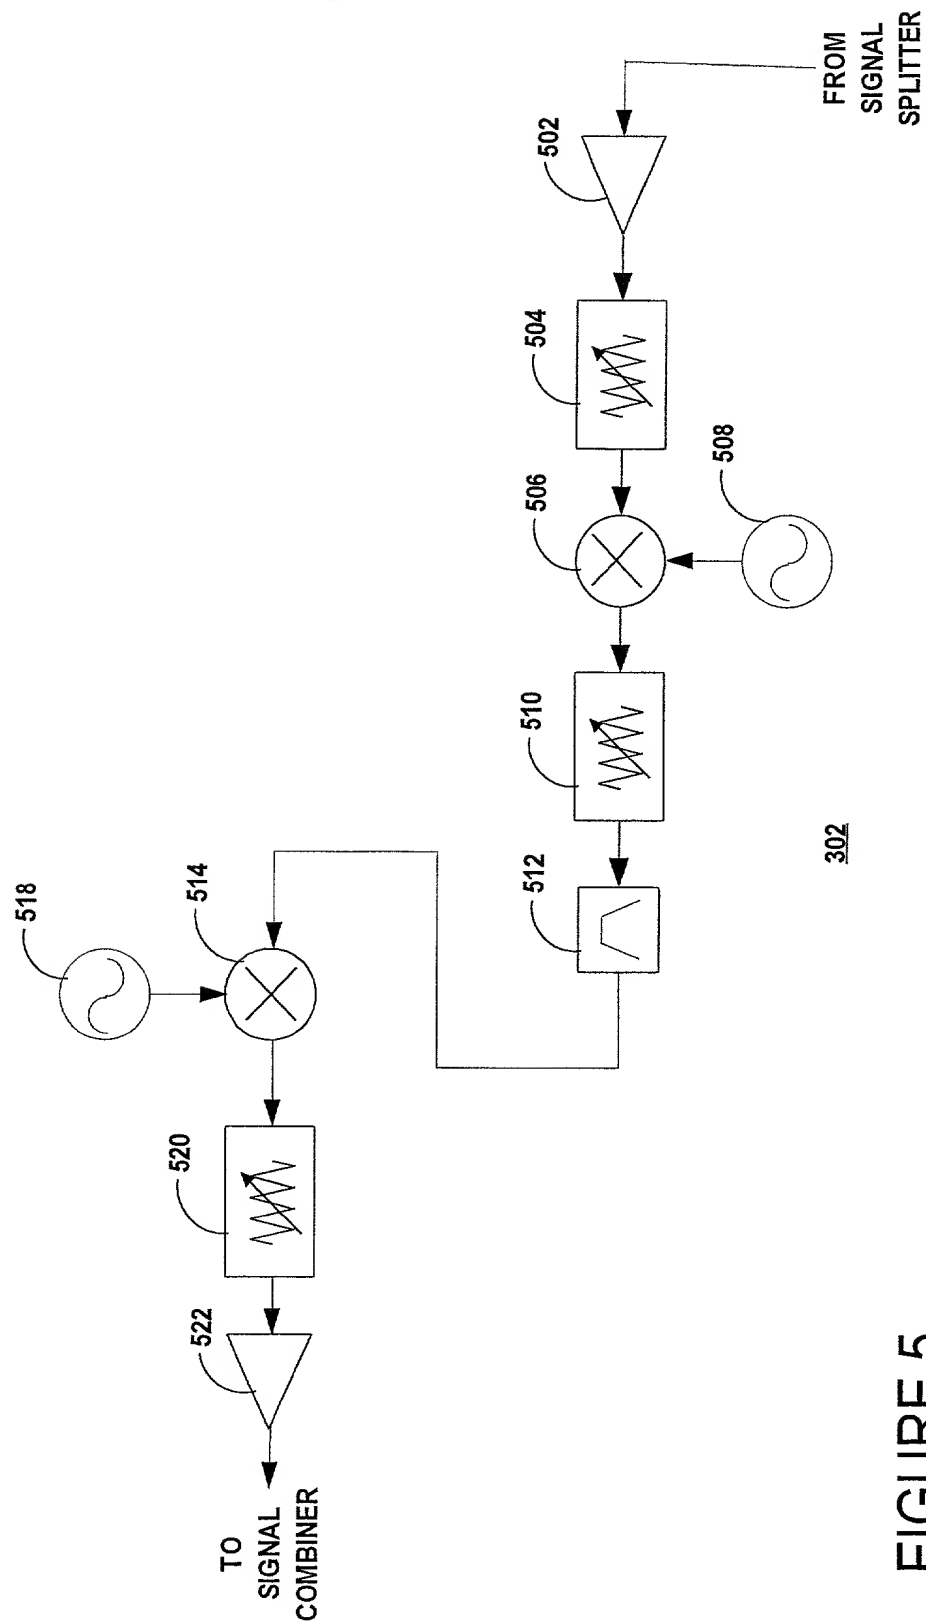


FIGURE 5

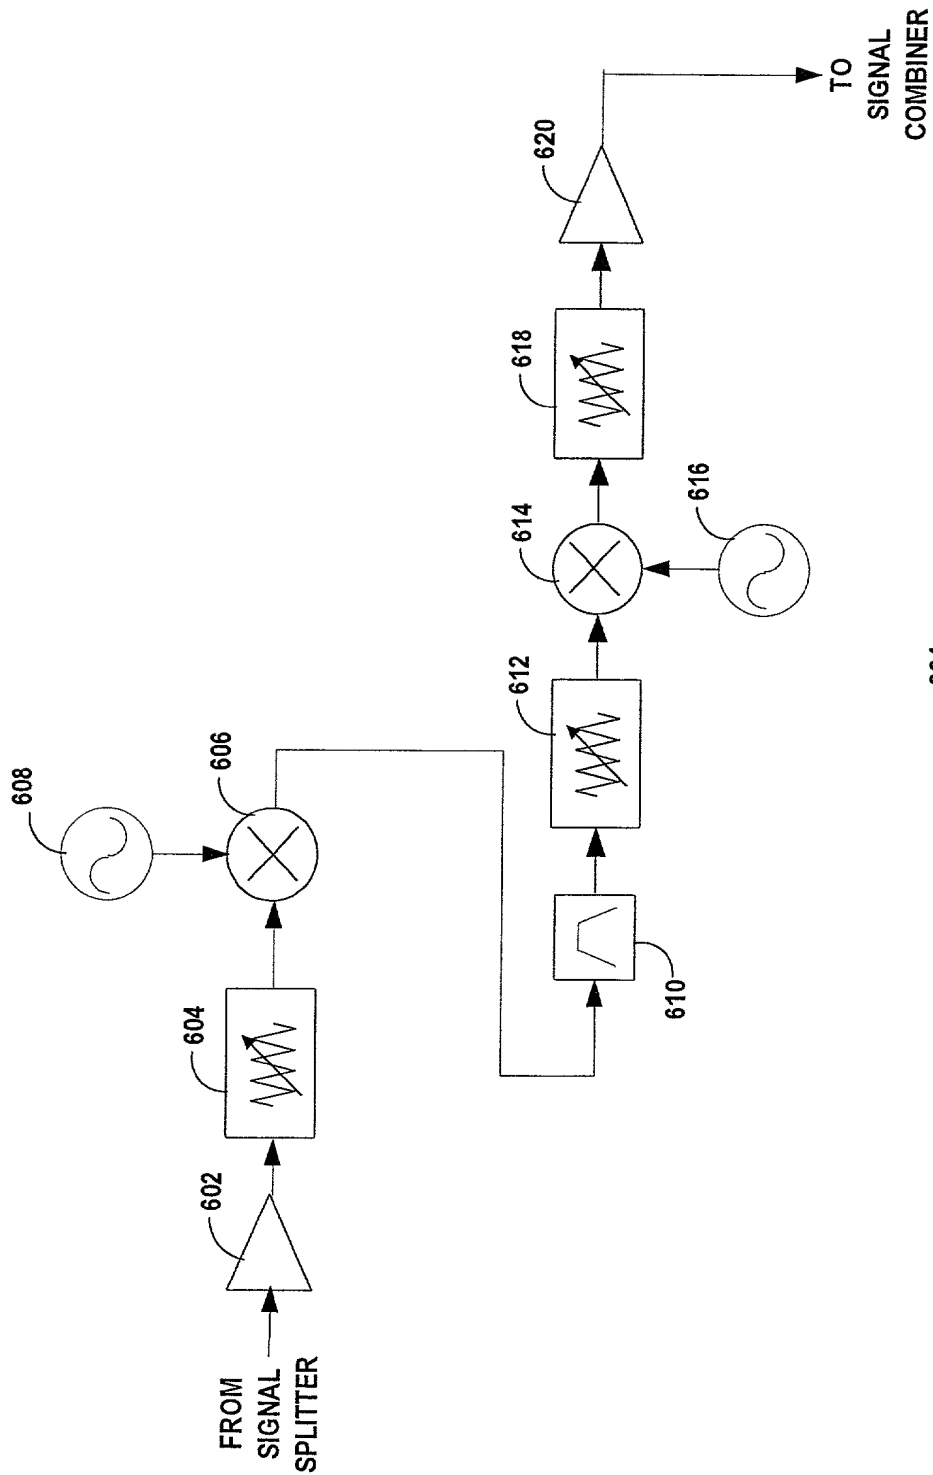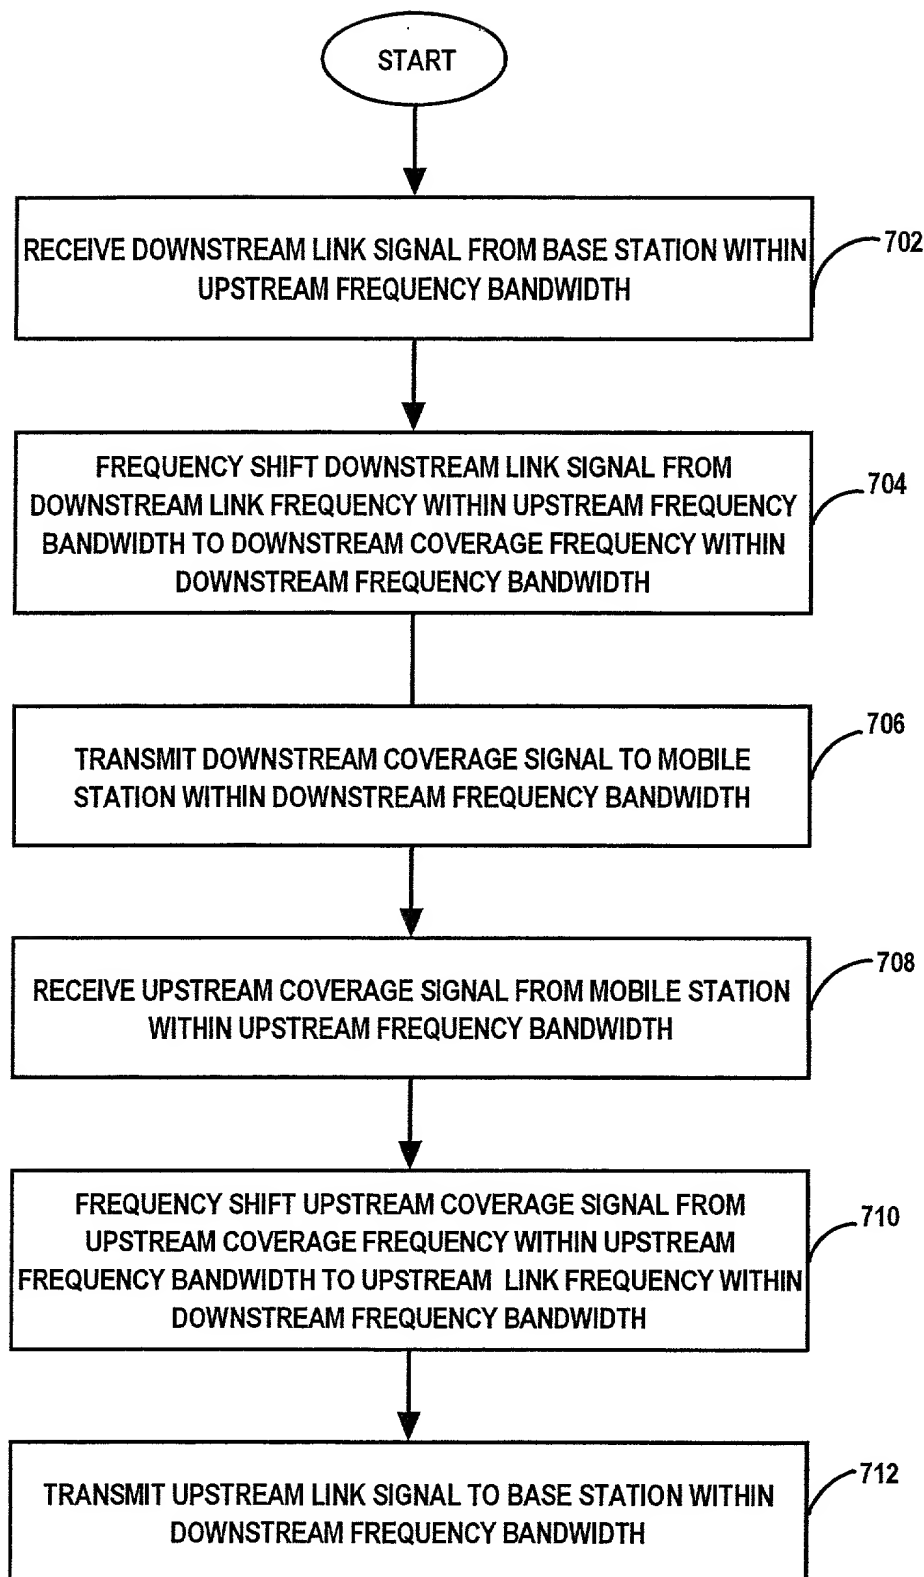

304

FIGURE 6



**FIGURE 7**

START

RECEIVE DOWNSTREAM COVERAGE SIGNAL FROM CELLULAR  
BASE STATION WITHIN DOWNSTREAM FREQUENCY BANDWIDTH

802

FREQUENCY SHIFT DOWNSTREAM COVERAGE SIGNAL FROM  
DOWNSTREAM COVERAGE FREQUENCY WITHIN DOWNSTREAM  
FREQUENCY BANDWIDTH TO DOWNSTREAM LINK FREQUENCY  
WITHIN UPSTREAM FREQUENCY BANDWIDTH

804

TRANSMIT DOWNSTREAM LINK SIGNAL TO DISTRIBUTION  
STATION WITHIN UPSTREAM FREQUENCY BANDWIDTH

806

RECEIVE UPSTREAM LINK SIGNAL FROM DISTRIBUTION STATION  
WITHIN DOWNSTREAM FREQUENCY BANDWIDTH

808

FREQUENCY SHIFT UPSTREAM LINK SIGNAL FROM UPSTREAM  
LINK FREQUENCY WITHIN DOWNSTREAM FREQUENCY BANDWIDTH  
TO UPSTREAM COVERAGE FREQUENCY WITHIN UPSTREAM  
FREQUENCY BANDWIDTH

810

TRANSMIT UPSTREAM COVERAGE SIGNAL TO CELLULAR BASE  
STATION WITHIN UPSTREAM FREQUENCY BANDWIDTH

812

FIGURE 8